


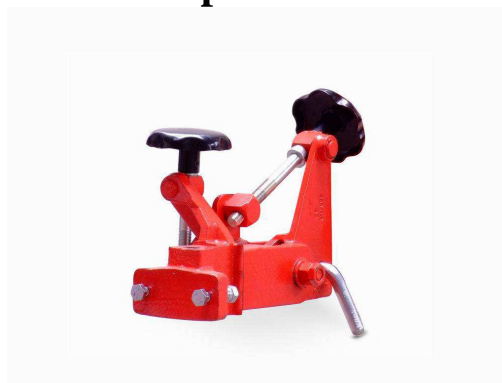

ADJUSTING ELEMENT NT-3

Adapter to adjust the position of GLOBAL SYSTEM attached implements



Connection of NT-3 Adjusting Element

NT-3 Adjusting Element is to be connected to the lower sling on the weight carrier by means of a plug with the split pin. The plug must be installed into the sling from above and the split pin must be fit in the plug hole.

Adjustment

The basic adjustment of the NT-3 Adjusting Element is made as follows: The front and rear adjustment bolts are loosened so that the front and central bodies and the trailer arm are in a horizontal position. The adjustment bolts on the front body are loosened so that there is a clearance between the adjustment bolt head and the trailer fork, whose value differs according to the applied implement (see Table).

ADJUSTMENT BOLT CLEARANCES

<u>Implement</u>	<u>Clearance</u>
Spike harrow ABR-354	6-8 mm
Spike harrow BH-138	6-8 mm
Double-way plough APH-352	1-2 mm
One-way plough APJ-018	1-2 mm
Share cultivator AKY-356	6-8 mm
Potato digger AVR-453	2-5 mm
Potato digger AVB-305	2-5 mm